



*开启设置码



低灵敏度



^&040&^

不睡眠

No Sleep

ully read or the trigger key is re



Induction Mode



***Manual Mode**