 


▼ Safe mode



* Setting code function Off



Setting code function On

▼ Chinese output format



GBK (output in Notepad, EXCEL, WPS)



UNICODE (output in word)

▼ Same code delay time



100ms



* 350ms

▼ Terminal setting



* Enable CR



Disable CR



Enable CR+LF



Disable CR+LF

▼ Keyboard layout



* USA



SPAIN



FRANCE



GERMANY



ITALY



CZECH



RUSSIA



CROATIA



TUYKEY Q

Serial port setting

▼ Baud rate



2400



4800



9600



19200



38400



57600



* 115200

This user's manual is designed for 2D barcode scanner. For detailed usage information, please download the complete user's manual from our website or from our authorized distributors.

Note: The setting code is a functional bar code, please do not scan it when it is not necessary, please scan the bar code on the product.

▼ Factory Default Setting



Factory Default Setting

Note: Factory default settings are marked with an asterisk "*" in this manual.

 
Interface

▼ USB

Connect the computer, scan the "USB Keyboard" barcode, barcode scanner is USB Keyboard model, if you want to set USB-COM, should install the USB-COM driver, and set baud rate: 115200, data bit: 8, Parity: None, stop bit: 1.




* USB Keyboard



USB COM

 ▼ USB HID



USB HID


▼ RS232

Connect RS232 interface, scan the "RS232" bar code, the serial port related setting is: baud rate: 115200, data bit: 8, Parity: None, stop bit: 1.




RS232

 
▼ All codes



All 1D code on

 

All 1D code off

 

All 2D code on

 


All 2D code off

▼ QR URL code setting



* URL Off



URL On

 
▼ Decode Beeper



Low



Medium



* High



Off

2D Barcode Scanner
User's Manual



V5.1