


1D Wired Barcode Scanner

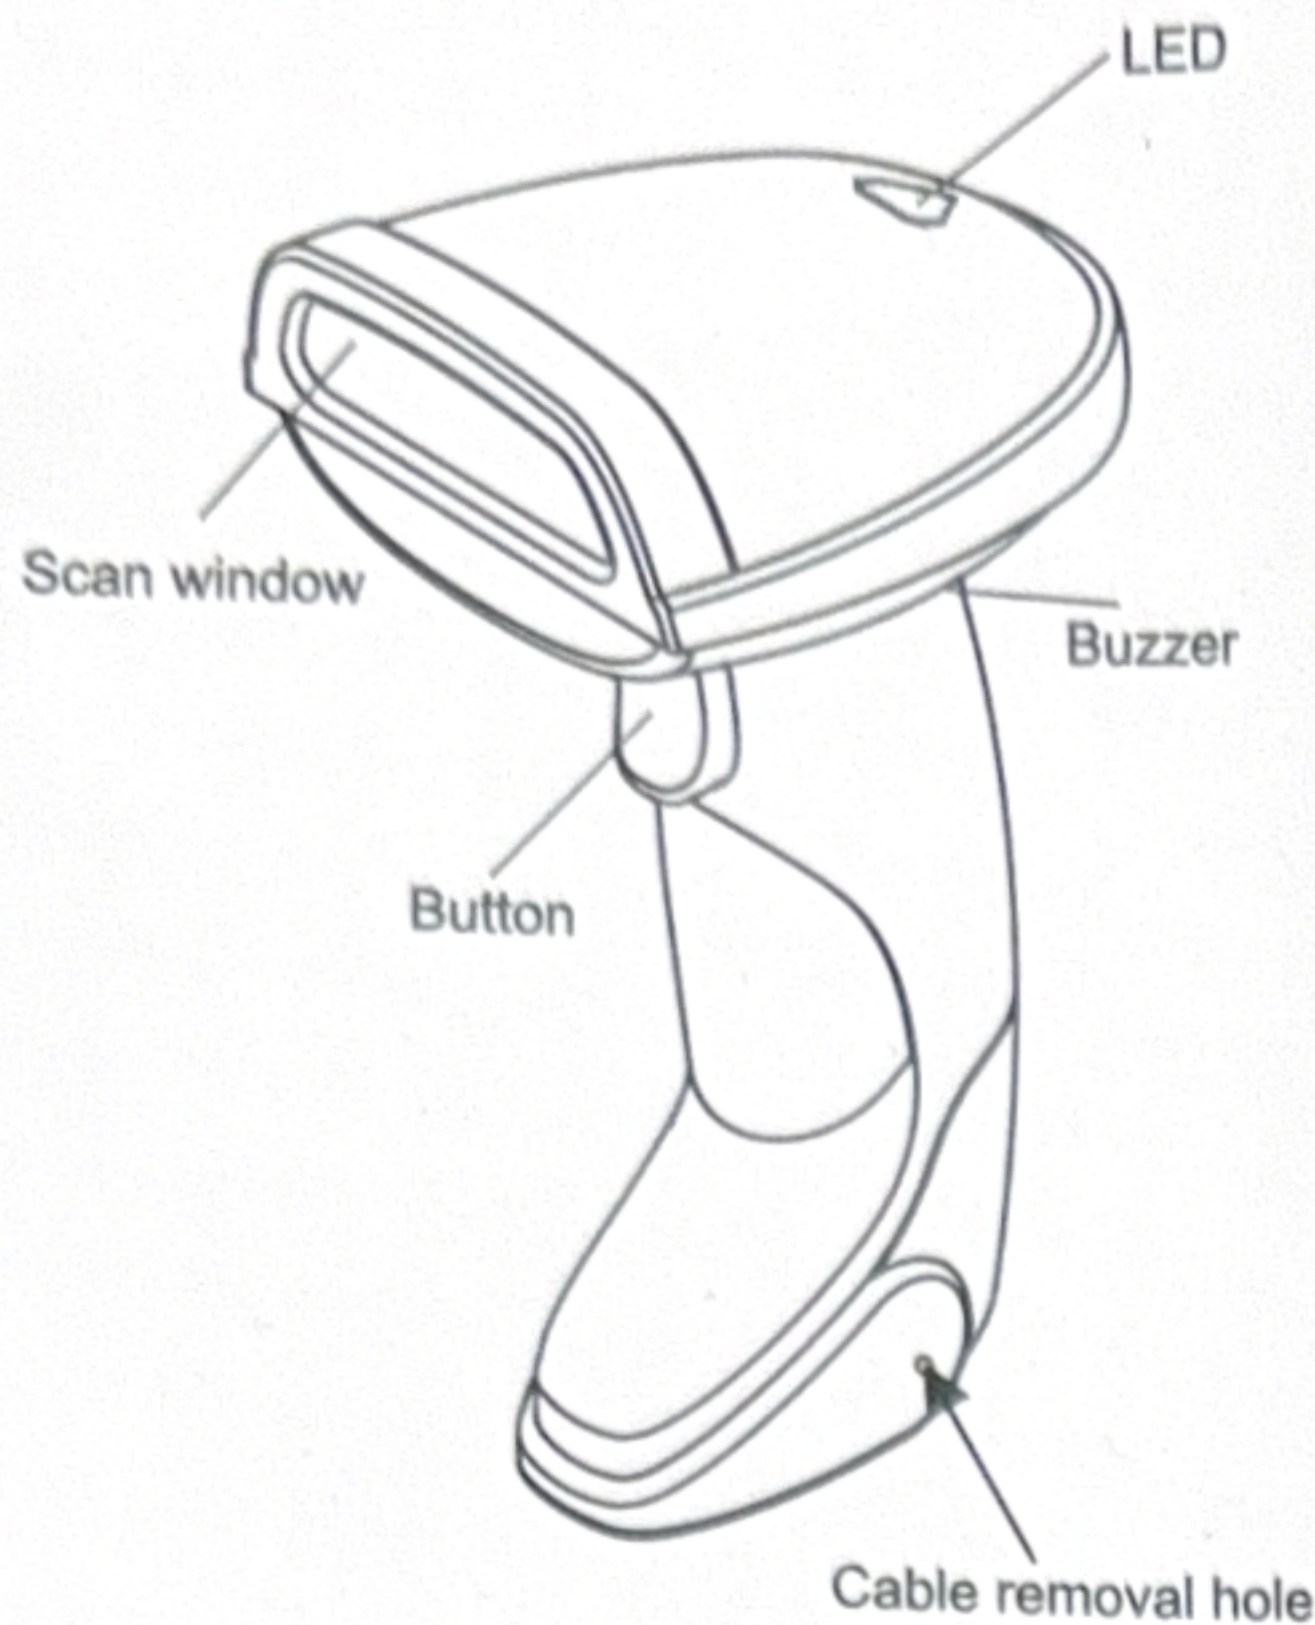

Pictures are for reference only. Please refer to physical objects.

Please read the user manual carefully before using.

Packing list

Barcode scanner, cable and user manual. (Specific accessories vary by product model)

Intro:

The barcode scanner provides accurate, easy and fast solutions of data entry and storage for computer information systems.

By default, the scanner is suitable for manual operation of hardware configuration, or you can choose "automatic-induction" function as needed.

The scanner offers integrated interfaces ways to any host computer systems, interfaces including:

USB HIV/COM/RS-232/Keyboard

Please confirm the interface you need before placing the order.

All the operating parameters are programmed by scanning the setting barcodes, which can be retained after power off.

Notes:

1. Do not look directly at or illuminate by means of an optical instrument (telescope)!
2. Do not remove the baffle on the lens guard and avoid direct exposure to the eyes!
3. Please work with professional staff when it needed to be disassembled, adjusted or repaired!
4. Do not disassemble, impact, squeeze, or put into fire or water. If there is a serious bulging, please do not continue to use. Do not put it in high temperature!

Reading Skills

In order to obtain good reading effect, the target beam projected by the viewfinder should aim at the center of the barcode, but can be aimed in any direction for reading.



Aim at the barcode and press the trigger to make the target beam in the middle of the barcode.

The closer to the barcode, the beam becomes smaller farther away from the barcode, the beam becomes larger. If the barcode is small, the scanner should be close to the barcode. If the barcode is larger, the scanner should be further away from the barcode, making it easier to read the barcode correctly.

If the barcode is high in reflectance (for example, coated), you may need to tilt the scanner at an angle to successfully scan the barcode.

Cable removal

1. Find the cable removal hole which is under the scanner.
2. Insert a pin into the hole and press the paper clip to pull the cable from the barcode scanner.

Simple-maintain

1. The stains and dust on the scan window will affect the scanner's working. When cleaning, you should use good quality facial tissue to wipe gently. Then blow it clean with a blown balloon. If you use poor paper to clean for a long time, it will damage the surface of the scanning window and affect the reading effect of the scanner.

2. The casing of the scanner can be wiped with a clean soft cloth. If needed, use a little detergent to add water and rub it with a soft cloth. If in doubt, please contact the local dealer.

Statement

In order to facilitate the majority of users to master and use this product, the settings are not fully listed in this manual. Some tedious operations have been omitted, greatly improving working efficiency. If there is any doubt or need for more detailed information, please contact the local dealer.

This manual has been carefully checked and reviewed, but errors in spelling and technology maybe are still not excluded completely. Neglects and errors will be fixed in the new version without notice. This manual is copyrighted by the company and may not be modified by any other units or individuals.

The basic setting

1 Reset to Defaults



2 Firmware Version



3 Buzzer



Off



4 Auto-sensor



Off



5 Interfaces



PS/2



UART



VCOM





6 Trigger Mode



7 Keyboard Language setting



8 Suffix/Prefix Function

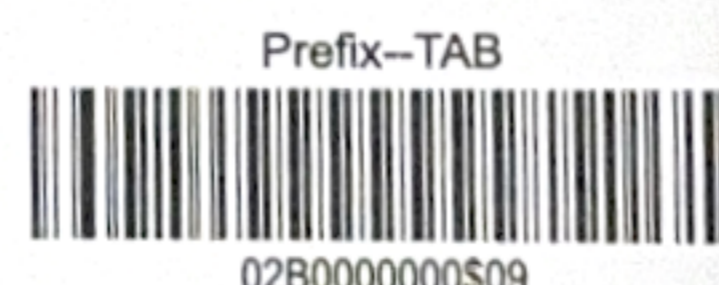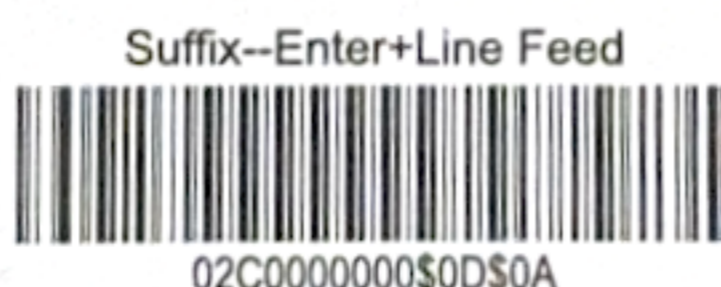

Self-checking

No.	Problem	Possible Reason	Solutions
1	If install the cable correctly and press the button, there is no indicator light not or prompt sound	No electricity	Please make sure the host is powered on and turned on. When you use the USB interface, connect the USB to the USB interface of the computer board. Don't use the extended USB interface and other USB extensions.
		The cable is not properly connected	Please check the data cable connection is loose or not
2	There is lighting, but barcode cannot be reading.	This type of barcode is not opened	Open this type of barcode by the setting code
		Barcode damage	Try to scan other barcodes with the same barcode type
		The distance between the barcode and scanner is unsuitable	Please move the barcode scanner closer or farther
3	The data is coue wrong offer up-load	Wrong input	Convert input method into standard English input method
		setting special	Restore the scanner's parameters to factory settings, or contact local dealers
4	Barcode cannot be decoded under other conditions	Device operation error	Turn off the device power and properly connect the device with the scanner. Turn on the device power, restore the scanner's parameters to the factory settings and scan the code again.