

Enter setup

This user's manual is designed for 2D barcode scanner. For detailed usage information, please download the complete user's manual from our website or from our authorized distributors.

How to program this scanner:

- 1.Scan the "Enter setup" code
- 2. Scan the settings codes which you need
- 3.Scan the "Exit setup" code.

Setup is now complete and the scanner is ready to be used with your selected settings.

System settings

Factory default settings



Factory default settings

Note: Factory default settings are marked with an asterisk "*" in this manual.



*USB-KBW



USB Virtual Com



Rs-232







Barcode types



Off 1D barcode scanning



*On scanning of all barcode types



Off 2D barcode scanning



On Web QR code



*Off Web QR code

Reading mode



*Manual mode



Continuous mode



Automatic mode





Enter setup

Beep





*On









Aiming

*Reading illumination



Off







Exit setup



2D Barcode Scanner

lleer's Manual

Enter setup

node: Refers to the sleet

and some resources will

\$>:S200017.<\$ (Default) 1.3.2 Sleep Time 2











On small keyboard output

On national tax ticket

GBK Chinese

*Off Chinese

direct transmission

direct transmission

output







Russia

飄

Sweden

Japan

Enter setup



1200

4800

Enter setup

Big keyboard

output

Off national tax ticket

GBK-Unicode Chinese

direct transmission

Exit setup

Off small keyboard output

case letter conversion



Convert to upper case letters



Upper case and lower case letter exchange

 
Upper case and lower



Convert to lower case letters



No conversion





*Add terminal CR



Add terminal CR+LF



Add terminal TAB



Off terminal addition



Turkey F

RS-232 setting

Keyboard layout





Germany









38400

115200

Baud rate





















Exit setup







